



WallStar[★] Spray & Up

DIGITAL

Simple installation for wall decoration


Quick, easy and clean installation

- ✔ No need for paste, just spray water
- ✔ Easy to apply, align and re-position
- ✔ Reduced clean-up time

Creating new business opportunities

- ✔ 100% PVC-free media
- ✔ Suitable for both professional and home markets
- ✔ Easy installation and removal provide opportunities for more frequent use

Reduced application time by up to 60%

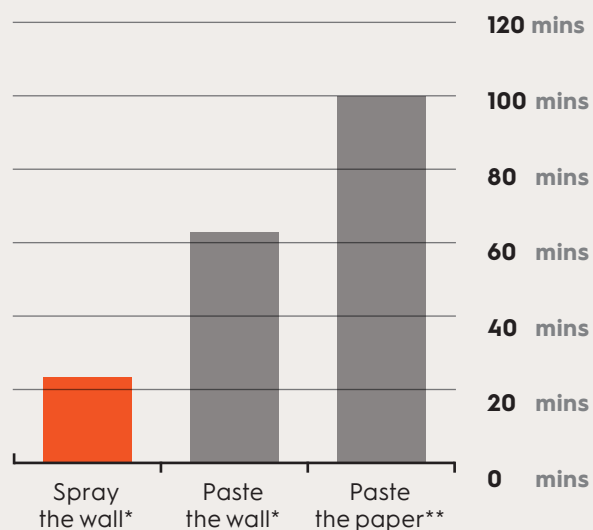

Area of 4,5m² included one corner, one electrical/internet outlet, and baseboard trim
 *Actual time **Comparative estimate, based upon not hanging from roll, material expansion time and longer time to cut

Product Installation

- Wall needs to be sealed and smooth. The wall surface should be clean, dry and free of debris. Priming is always recommended for best results at all times and especially with old, damaged, or flaking paint, and on a wall with uneven surfaces.
- Also suitable for use over following panels – Acrylic, Di-bond and Foamex.
- Standard spray bottle can be used. You can also use a damp sponge.
- Fill spray bottle with tap water. Turn nozzle to spray function.
- Apply water at rate of 100ml per 1sqm. Don't hesitate to put a lot of water, necessary to activate the glue. Pay particular attention to seams and edges.
- Material can be re-positioned and re-aligned during first 10 minutes. If sliding the material into position is too difficult, do not hesitate to pull back partially the material and apply more water on the wall before re-applying. Alternatively, it's possible to apply the water to the back of the material.

Product Removal

When it's time for a change, product can be easily removed from the wall.

- Use a bucket of water and a sponge, thoroughly wet the wall mural, starting from the top. Keeping the mural wet, you will be able to slowly peel it from the wall and recover a clean wall. Make sure you constantly keep the mural wet.

Packaging & handling recommendations:

- Humidity: Minimize the exposure of unprotected material to warm and humid conditions as much as possible (<50% humidity, <23°C). Exposed sheets can begin to feel tacky after 10 minutes when exposed to humid environments. Dehumidifying or drying the web will render the sheets non-tacky.
- Packaging: rolls should be packaged and stored in a completely sealed polybag and/or stretch wrap to protect the entire roll (surface, edges, and core) from humidity.

It is recommended to insert 5g silica gel pads, inside the core of the product.

As a guide, use as follows:

25LM => 1 pad

50LM => 2 pads

100LM => 3 pads

150LM => 5 pads

- Tension: For additional protection, use minimal roll tension when winding after printing (<1N/cm) and/or a protective release liner if low tension cannot be used.

Commercial Grade	g/m²	Effect	Type	Printing	Washability	Recommended Application	Fire Rating
WallStar® Digital Spray & Up – Smooth							
Spray & Up Matte 150	150	Matte	Uncoated nonwoven	UV / Latex	Washable	Light to medium traffic	Euroclass B-s1-d0
Spray & Up Satin 200	200	Satin	Coated nonwoven	UV / Latex	Highly washable	Light to high traffic	Euroclass C-s1-d0
WallStar® Digital Spray & Up – Textured							
Spray & Up Fibrous 167	167	Fibrous	Uncoated nonwoven	UV / Latex	Washable	Light to medium traffic	Euroclass B-s1-d0

STAY IN TOUCH

Contact Ahlstrom-Munksjö Sales:

✉ wallcover@ahlstrom-munksjo.com

www.ahlstrom-munksjo.com



DISCLAIMER: The information supplied in this document is for guidance only and should not be construed as a warranty. All implied warranties are expressly disclaimed, including without limitation any warranty of merchantability or fitness for use. All users of the material are responsible for ensuring that is suitable for their needs, environment and end use. All data is subject to change as Ahlstrom-Munksjö deems appropriate.

© Ahlstrom-Munksjö 2021